

Aquila®

English

PORTABLE SPEAKER

User instruction



Model: Soundbird CM

Introduction

Thank you for purchasing the portable speaker Soundbird CM. We hope that it will bring you much joy and that it enhances your moments. Want to give us feedback? Don't hesitate to contact us.

Product overview

Soundbird CM is your portable sound companion - powerful, colorful, and magnetic. Whether you're on the go, or throwing a party at home, this speaker is built to go where the music takes you.

Included in the packaging

Soundbird CM, 1x Type-C charging cable, Carrying bag, User manual

Technical specification:

Product name: Soundbird CM

Bluetooth Version: 5.4

Battery capacity: 7.2V/4000mAh

Playtime: 6-8 hrs (50% volume, light on), 10-12 hrs (50% volume, light off)

Charging time: 2.5 hrs


Input and output: 5-20V 1.5-3A (Max 27W)

Speaker units: 15W x 2

Product size: 233 x 95.6 x 53mm

Weight: 690g±50g

Basic functions

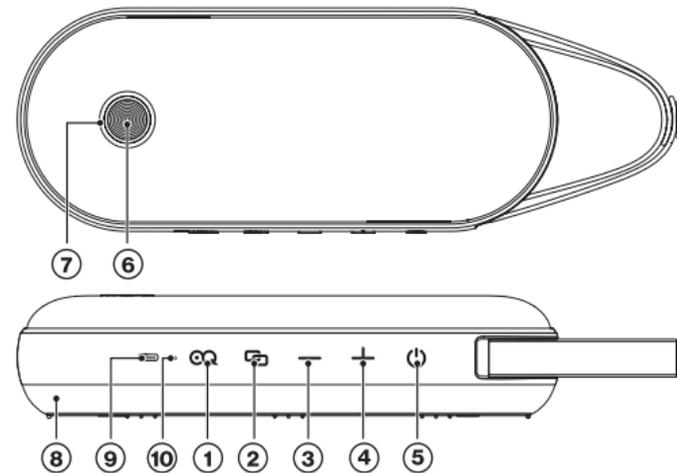

1. EQ Switch (bass sound, pure sound, balanced sound)

2. TWS connection / Multi-connection

3. Volume '-' / Last track

4. Volume '+' / Next track

5. Turn ON, OFF / Bluetooth disconnect / Clear pairing records / Reset

6. Pause / Play / LED Modes / Call

7. Indicator Light: BT (yellow), multi-connection (Green), low battery (yellow)

8. 8 modes colorful light

9. Type-C charging port

10. Calling Mic

Operation guide

Power on

2 sec — Press the on button for two seconds to power on the device. The indicator light (7) will start flashing yellow.

Turn off

2 sec — Press the on button for two seconds to power off the device. The indicator light (7) will go dark.

Connect your device

2 sec — Power on the Soundbird CM. When the indicator light (7) is flashing it's searching for a bluetooth connection. Activate bluetooth on your device and search for the product (named Soundbird CM).

When the indicator light (7) stops flashing and turns solid yellow your device is connected.

Disconnect your device

x2 — When powered on, shortpress the off button two times to disconnect your device. The yellow indicator light (7) will start to flash again.

Reconnect your device

x2 — When powered on, shortpress the off button two times to reconnect to the last device connected.

Clear pairing history

x3 — To make the Soundbird forget all previous pairings, shortpress the off button three times.

TWS pairing mode

— First connect your speaker to your device through Bluetooth. For connecting two Soundbird CM short press the TWS button (2) on both speakers to activate TWS, after TWS paired, the LED flashing speaker is master, and the LED that lights solid is submaster; short press again to disconnect TWS

To add a third or fourth speaker etc you need to activate multi-connection. Press and hold TWS button (2) for 2 seconds on all respective speakers.

Disconnecting all devices from TWS network

2 sec — On the master Soundbird CM longpress the TWS button (2) to disconnect all other Soundbird CM connected to the network.

Play / Pause sound

— Press the play button ones to play or pause your sound/music.

Switch light modes

x2 — Shortpress the button two times to start to cycle between the eight different light modes.

Turn off light

2 sec — Longpress the button to turn off light completely.



Want to know more?

Visit aquila.eu to learn more about your product.

Get in touch: www.aquila.eu | hello@aquila.eu

Contact: GPBM Nordic AB | Sörredsvägen 113 | 418 78 Göteborg | Sweden
 Contact: Brands Services B.V. | Florijn 14-16 5751 PC Deurne | The Netherlands

Notes:

1. Please read this manual carefully before use and keep it properly.
2. It is suggested to use the supplied charging cable to charge the product.
3. For the rest use, please fully charge the product.
4. Please use certified adapter that has passed national safety certification.
5. If you do not use the product for a long time, be sure to charge it once per month at least to maintain its performance.
6. Do not use this product in an extremely cold or hot environment, such as temperature beyond the range of -10°C-40°C. If use it beyond the above range, the product may stop automatically to protect the internal circuit.
7. When charging it in a high or low temperature environment, the product may automatically stop charging to protect the battery.
8. Storage environment temperature: -5°C-35°C RH<70% (recommend 25°C+5).

Important safety instructions:

1. Do not disassemble or repair the product personally, otherwise it may cause product damage or personal injury.
2. Do not use it in dusty, humid, dry, and high-temperature environment.
3. Do not place this product near a heat source, or a place with direct sunlight, a lot of dust or mechanical vibration.
4. In order to reduce the risk of re, please do not cover this product with newspapers, tablecloths, curtains etc., during use.
5. If the product has a waterproof feature, please do not exceed the nominal parameter range when using it.
6. When the product is damaged (such as the power cord or plug is damaged, liquid enters or objects fall into the device, unable to operate normally), it must be repaired.
7. When the product is fully charged, do not connect it to the charger for further long time charging.
8. The maximum ambient temperature should not exceed 45°C.

*This speaker supports mobile phones/ tablets/ PCs etc. Here this User Manual is illustrated based on mobile phones.

Frequently asked questions

Q1: What kind of charger should we use for the speaker?

A: All common USB chargers can be used, while we suggest the ones with PD / QC 30W or above for fast charging.

Q2: What if there is noise or discontinuous sound during playing?

A: The speaker can normally be used within 10m under no obstruction environment. If it is beyond 10m or with obstruction, there might be noise or discontinuous sound.

Q3: Why is the speaker power off automatically after power on without any operation?

A: When there is no Bluetooth pairing in 10 minutes, the speaker will turn off automatically to reduce power consumption.

Q4: Why cant the Soundbird CM connect to a once-paired phone?

A: First, remove the speaker's paired name from the cell phone's Bluetooth list and then restart pairing.


Q5: The speaker cannot be turned on?

A: Please plug in the charger, 30 minutes and then try again. Or try to long press power button 8-20s to reset.

Q6: Why is the charging indicator light not on while charging?

A: If the charging indicator is not on when battery level is very low, please charge for 1 hour and try again.

Battery status and charging

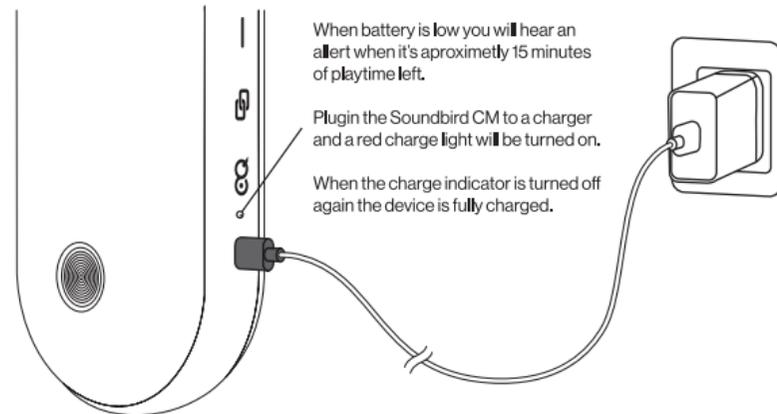

Low battery indication

When there is only 20% battery left you will hear a beep every 5 minutes that alerts you to start charging the Powerbird CM.

Answering call

If you get a call while connected to the Soundbird CM you can answer it by pressing the start button.

Privacy mode

x2 Shortpress two times in order to transfer the call back to your phone.

Decline incoming call

2 sec If you get a call you can decline it by pressing the start button for two seconds.

EQ control

Switch between three different sound modes: Base, Pure, Balanced.

Volume up/down

Shortpress + to turn volume up.
Shortpress - to turn volume down.

Next song / Previous song

2 sec Long press + for next song
long press - for previous song